


GRANDO RM QUICK START GUIDE

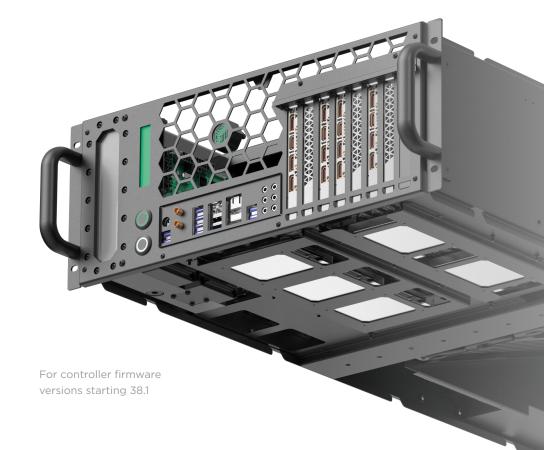



Support

Visit https://grando.ai/rm for technical documentation or email us support@comino.com

Copyright 2021 Comino, Grando. All rights reserved.

Welcome to Grando RM!

An important note

Please read this document and safety information in the RM user guide carefully before you first use Grando RM.


Installation

Attach rack mount handles kit, rails or legs. Place the device in a 4U rack space or on a horizontal surface (vertically or horizontally).

Starting Up

Connect all AC power cables to each of the power supply units of GRANDO RM. After connecting the power supplies to the AC mains, the controller will automatically turn on, followed by liquid cooling system self-diagnosis.

Long model

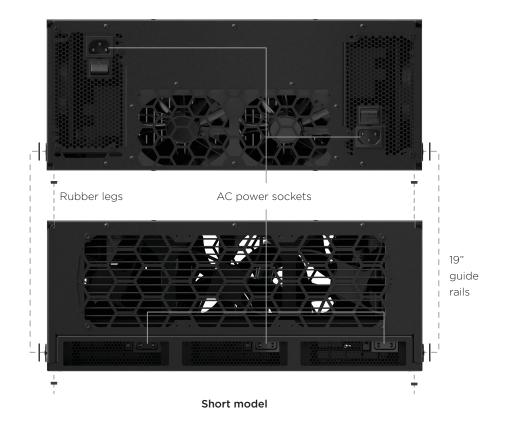

Turning ON

To turn ON the liquid cooling system PRESS and HOLD BOTH buttons.

Shutting DOWN

To shut down the device PRESS and HOLD BOTH buttons. Press NEXT>> (PB2) button to submit shut down.

Control buttons usage



- Press the left/bottom button PB1 (<<PREV) for less than 2 sec, to go to the "PREVIOUS" command
- Press the right/top button PB2 (NEXT>>) for less than 2 sec, to go to the "NEXT" command
- Press and hold the left/bottom button PB1 (<<PREV) for more than 2 sec, to "CANCEL" the command
- Press and hold the right/top button PB2 (NEXT>>) for more than 2 sec, to "SUBMIT" the command

